
ELECTRIC RICE COOKER

USER MANUAL

CR-0215M TOOL SERIES
0.36L(1~2 PERSONS)

CUCKOO



CUCKOOELECTRONICS CO.,LTD.

CONTENTS

CONTENTS

IMPORTANT SAFEGUARDS	3
ADDITIONAL IMPORTANT SAFEGUARDS	3~4
SPECIFICATIONS	4
SAFETY PRECAUTIONS	5~8
PART NAMES	9
HOW TO CLEAN AND MAINTAIN YOUR RICE COOKER	10
NAME AND FUNCTION OF EACH PART / ERROR CORD AND POSSIBLE CAUSE	11
BEFORE COOKING RICE	12
FOR TASTY RICE	13
HOW TO COOK	14~15
HOW TO USE PRESET FUNCTION	16
TO KEEP COOKED RICE WARM AND TASTY	17
TROUBLESHOOTING	18
WARRANTY PERIOD	19

IMPORTANT SAFEGUARDS

1. Read the user manual before using this appliance.
2. Do not touch hot surfaces.
3. To prevent electric shock or fire, do not immerse the power cord, plug, or cooker in any liquid.
4. Close supervision is necessary when this appliance is used by or near children. This appliance is not intended for use by young children.
5. Unplug the cord from the outlet when not in use and before cleaning. Allow the appliance to completely cool before making adjustments or cleaning.
6. Do not operate the unit if it or the power cord or plug is damaged. Return the unit to your nearest authorised service facility for examination and repair.
7. Modifications to this unit is not approved and may cause injuries.
8. A damaged power cord must be replaced by an authorised service agent.
9. Do not use outdoors.
10. Do not let the power cord hang over the edge of a table or touch hot surfaces.
11. Do not place the appliance on or near a hot gas or electric burner or oven.
12. Always attach the power cord to the appliance, then plug into the wall socket.
To disconnect, set all controls to 'Off or Cancel', then remove the plug from the wall socket.
13. Do not use the appliance for anything other than its intended use.
14. Use extreme caution when moving an appliance containing hot oil or hot liquids.
15. Oversized foods, aluminium foil, utensils, etc., must not be inserted into the appliance.
16. Keep appliance away from flammable materials such as curtains, walls, etc. while in operation.
17. To prevent electric shock, use only the inner pot provided.
18. Improper use may result in burns. Before operating the unit, properly secure and close the unit. See 'Operating Instructions'.
19. Do not cook foods such as apple sauce, cranberries, cereals, macaroni, spaghetti, or other foods that tend to foam or froth, and may block the steam vent hole.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS
THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING : This appliance generates heat and releases steam during use.

Use proper precautions to prevent risk of burns, fire, injuries, or damage to property.

1. Keep hands and face away from the pressure release valve when releasing pressure.
2. Take extreme caution when opening the lid after cooking. Severe burns can result from steam inside.
3. Never open the lid while the unit is in operation.
4. Do not use without the inner pot in place.
5. Do not cover the pressure valve with anything as an explosion may occur.
6. Do not touch the inner pot or any heating parts, immediately after use.
Allow the unit to cool down completely before handling.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farmhouses;
- by clients in hotels, motels and other residential-type environments;
- bed-and-breakfast-type environments.

ADDITIONAL SAFEGUARDS

- ▶ Avoid touching hot parts: outer lid, inner pot, inner lid and especially the steam vent hole.
- ▶ Do not switch on when the main body is empty.
- ▶ Make sure that the heating plate and the magnetic switch are clean and dry whenever putting the inner pot into the cooker.
- ▶ Do not use sharp instruments to clean the inner pot as this may damage the non-stick coating.
- ▶ A short power-supply cord is provided to reduce the risk of entanglement or tripping over a longer cord.
- ▶ Longer detachable power-supply cords or extension cords are available and may be used with caution.

SHORT CORD INSTRUCTIONS/SPECIFICATIONS

- Note** : A. A short power-supply cord (or cord set) is to reduce the risk of entanglement or tripping over a longer cord.
- B. Longer cord sets or extension cords are available and may be used with caution.
- C. If a long cord set or extension cord is used, ensure the following:
- (1) The marked electrical rating of the cord set or extension cord should be at least equal to the electrical rating of the appliance.
 - (2) If the appliance is of the grounded type, the extension cord should be a grounding-type three-wire cord, and
 - (3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

CAUTION : During use, the internal parts of the rice cooker and the area around the steam vent are **HOT**.
Keep out of reach of children to avoid possible injury.

SPECIFICATIONS

Model name		CR-0215M
Power Supply		AC 220~240V, 50-60Hz
Power Consumption	Cook / Warm	300W
Cooking Capacity	WHITE RICE	1~2 CUPS
	MULTIGRAIN	1~2 CUPS
	PORRIDGE	0.25 CUPS
Power cord Length		0.9m
Dimension	Width	17.8cm
	Length	18.8cm
	Height	19.4cm
Product Weight		1.45kg
Country of Origin		CHINA

SAFETY PRECAUTIONS

- Read the following product safety guide carefully to prevent any accidents and/or serious danger.
- 'Warning' and 'Caution' are different as follows.

Warning

This means that the action it describes may result in death or severe injury.

Caution

This means that the action it describes may result in injury or property damage.



• This sign is intended to remind and alert that something may cause problems under certain situation.

- Please read and follow the instruction to avoid any harmful situation.



• Indicates a prohibition




• Indicates an instruction

Warning

Do not


Do not use damaged power cord, plug or loose socket.

- If the sheath of the Power Cord has peeled off due to carelessness during use of the product, it may cause fire or electric shock. Thus, check the status of the Power Cord, Power Plug, and socket frequently.
- If the Power Cord or the Power Plug is damaged, let the manufacturer, the store, or a qualified technician (service technician) change the cord to prevent harm.
- Please let the designated service center repair the product without fail.

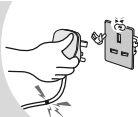


Please be careful of water and chemicals.

- It can cause an electric shock, fire, deformation, malfunction or discoloration.
- If water gets into the product, please contact Customer Service center.

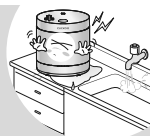

Do not open the lid during heating and cooking.

- If you open the lid while boiling or steaming, the steam may cause a burn.
- Be careful when you open the lid right after cooking, the steam may cause a burn.

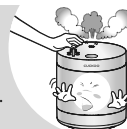

Do not cover the steam outlet with your hand or face.

- It can cause burns. Do not cover the steam cap with your hand or face.
- Especially be careful to keep it out of children's reach.



Do not use the cooker near hot things such as stove, gas stove or direct ray of light.


- It can cause an electric shock, fire, deformation, malfunction or discoloration.
- Do not put the Power Cord near an electric heating appliance.

The sheath of the Cord may melt and cause fire or electric shock. Please check the power cord and plug frequently.



Use a single socket with the rated current above 13A. Using several lines can cause overflow or breakdown.

- Using several lines in one socket can cause overheating or fire. Please check the power cord and plug frequently.
- If there is a foreign substance or moisture on the Power Plug, wipe it off before use.
- Use an extension cord with the rated current above 13A.

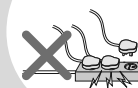

Don't spray or put any insecticides and chemicals.

- This may cause fire.
- If cockroaches or any insects get inside the cooker, please contact a dealer or a service center.



Do not use a rice cooker at a place where dust is trapped or chemical material is located.

- Do not use any combustible gas or flammable materials nearby a product.
- It can cause explosion or fire.

Do not use any other metal objects such as aluminum foil on the outer surface of the inner pot.

- It can cause an electric shock or fire.

SAFETY PRECAUTIONS

⚠ Warning

Do not use a deformed Inner Pot or an Inner Pot other than the one exclusively for the product.

- Using a different inner pot can cause an operation error or fire.
- When you have dropped the Inner Pot or the Inner Pot is deformed, contact Customer Service center.



⊘ Do not

Do not use it without the inner pot.

- It can cause electric shock or malfunction.
- Do not pour rice or water without the inner pot.
- If rice or water gets inside the body, do not turn the product over or shake it. Please contact the Customer service center.




Do not cover the steam outlet with a duster, a towel or apron, etc.

- It can cause a fire or a breakdown.
- It can cause an explosion by pressure.



Do not bend, tie or pull the power cord by force.

- It can cause an electric shock or short circuit resulting in fire.
- Please check the power cord and plug frequently.

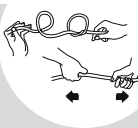

Remove external substances on plug with a clean cloth.

- It may cause fire.
- Please check the power cord and plug frequently.

Do not change, extend or connect the power cord without the advice of a technical expert.

- It can cause an electric shock or fire.

Do not move the product by pulling the power cord.

- Electric shorts might cause fire.

Do not clean the product with water or pour water in the product.

- It can cause an electric shock or fire.
- If water gets into the product, stop using it, unplug the power plug, and contact a service center.



Do not alter, reassemble, disassemble or repair.

- It can cause an electric shock or fire.
- Only a service technician should dismantle or repair the product.
- Contact Customer Service center for repairs or malfunction.



Do not put a foreign substance such as a metal stick into the Steam cap or the product. (Extra caution with children.)

- It can cause an electric shock or fire.



Do not put any needles, cleaning pins, etc. in the ventilator or any gap of the cooker.

- It can cause an electric shock or fire.

This device is not intended for use by people who lack physical, sensory, and mental abilities or lack the experience and knowledge to safely use the device without supervision or instruction, including children.

- Keep device out of reach of children.
- Device may cause electric shock, burns, etc



Do not over unplug and plug the power cord excessively.

- It can cause an electric shock or fire.

Be careful that both the plug and power cord are not bit by animals or pierced by sharp metal materials.

- Damages by impact can cause an electric shock or fire. Please check the power cord and plug frequently.




SAFETY PRECAUTIONS

⚠ Warning

🚫 Do not

Do not use on a rice chest or a shelf.

- Do not use between furniture. Please check the power cord and plug frequently.
- If used on furniture, automatic steam releasing can cause damage, fire and an electric shock.

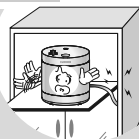

Clean any dust or foreign substance off the temperature sensor, heating plate and inner pot.

- It can cause a system problem or fire.



Do not place heavy things on the power cord.

- It can cause an electric shock or fire. Please check the power cord and plug frequently.

Attach the Detachable Cover before you use the product.

- If you use the product without the Detachable Cover, it may cause electric shock, fire, steam leak or cause the product to malfunction.



Do not plug or pull out the power cord with wet hands.

- If you pull the Power Plug out with a wet hand, it may cause electric shocks.
- If you excessively pull the Power Plug, it may cause electrical shocks due to damage to the Power Cord.


Be careful not to harm your hands when opening the cover.

- Do not leave the cover opened. It might cause accidents.



Connect the power connector (Figure 1) to the main body first and then connect the power plug (Figure 2) to the outlet.

- This helps to avoid an electric shock or fire.

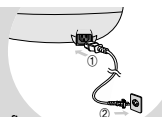

⚠ Warning

🚫 Do not

When you pull out the power plug, don't pull the power cord. Hold the power plug securely to pull it out without touching the power cord.

- It can cause an electric shock.



After cooking, wipe out the water remaining in the product.

- The heated areas may cause a burn.
- Wipe out the water remaining in the tray of the product.



Be sure to clean after cooking.

- If you cook or keep warm after baby food, the rice may absorb odors.
- Clean thoroughly before use. (Refer to page 9)



When you clean the product, wash the Inner Pot and the Detachable Cover with neutral detergent, and dry them. Wipe the product with a dry and clean cloth.



During warming, close the lid and then connect the power supply.

- Staying in warm mode for long periods may cause rice to smell and discolour.

Be cautious when opening rice cooker immediately after cooking because steam and heat from the inside of the product can cause burns.

To clean the product, wait until it cools down.

- The heated areas may cause burns.

Please plug the power cord completely into the power socket.



SAFETY PRECAUTIONS

⚠ Warning

Do not place heavy things on the power cord.

- It can cause an electric shock or fire. Please check the power cord and plug frequently.



⊘ Do not

Do not use inner pot for other purposes. And do not heat up the inner pot on the gas stove.

- The Inner Pot might deform, which may cause malfunction.



Do not place on rough top or tilted top.

- It may cause fire or malfunction.
- Be careful with the Power Cord.
- Keep it tidy to avoid risk of tripping on it and the product.



Do NOT use near wall or furniture. Otherwise wall or furniture may be damaged, discolored or deformed due to vapor or heat.

- When using in drawer or cabinet etc, ensure that vapors do not enter it.

Recommended type of scrubber to clean the inner pot (inside, outside).

Available	Unavailable
Cotton wool, Sponge wool, Microfiber, Mesh wool	Blue, Green scrubber (Abrasive material), Iron, Stain wool, Other metallic materials

- If you do not use a suitable scrubber for cleaning, the inner pot coating may be damaged and peeled off.

Do not use the product for other than cooking, warming, and designated menu, such as boiling water, sweet rice drink, seaweed soup, curry, frying, etc.

- It may cause a malfunction or odor.

Please contact dealer or service center when strange smell or smoke occur.

Use only AC 220V~240V.

- Do not use a transformer to raise or decrease the voltage.
- Failure to follow these instructions may result in electric shock and/or fire.

This appliance is intended to be used in household and similar applications such as :

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Please pull out the plug when not in use.

- It may cause electric shock, electrical short, and fire due to the lowering of the insulation performance.



Do not touch the metallic surface of the inner pot and heating plate after cooking or warming

- You may get burned.



The Inner Pot coating may be peeled off.

- Inner pot coating may wear away after long use.
- When cleaning the inner pot, do not use tough scrubber, metallic scrubber, brush, abrasive metallic etc.



Do not use the cooker near magnetic field.

- It can cause burns or breakdown.



Do not drop or impact the cooker.

- It can cause a safety problem.
- Do not apply excessive force to or drop the product.



Do not use over the maximum capacity.

- It can cause overflow or breakdown.
- Do not make porridge over the designated amount.

If possible, only use warming function when cooking white rice. Other foods are easily discolored.

Take out the Rice shovel before keeping warm.


- It may cause odor or discoloration.

Do not unplug and plug the power cord over and over.


- It can cause an electric shock or fire.

PART NAMES

Name of each part

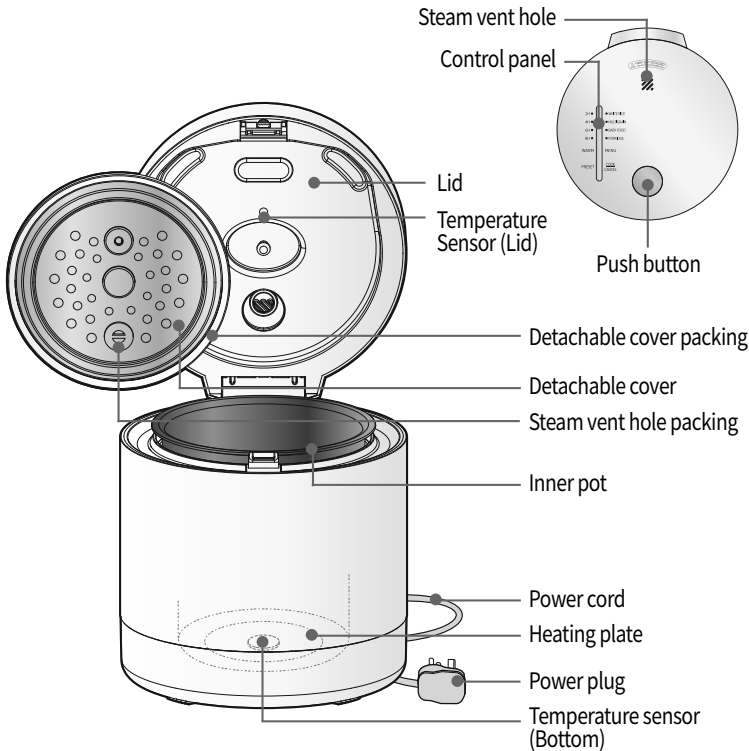

Accessories

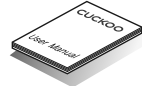


User manual



Rice spatula



Measuring cup




Power cord
(Detachable)

※ The plug type may differ from the actual.


HOW TO ASSEMBLE AND DISASSEMBLE DETACHABLE COVER

1 DISASSEMBLING

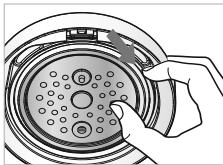


- ※ As shown in the picture, insert your finger into the end of the detachable cover (the area indicated by the arrow) and pull to remove it.
- ※ Do not pull the detachable cover by pulling on the packing.
- ※ The detachable cover is hot during or immediately after cooking, so allow it to cool before removing.

2 ASSEMBLING

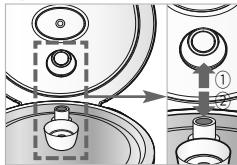

- ※ Hold the detachable cover as shown in the picture on the left, and align the steam exhaust hole (① arrow) and the steam exhaust packing (② arrow) in the enlarged picture on the right.
- ※ If the positions are not aligned, cooking or heat retention may not work properly, or it may cause a malfunction.

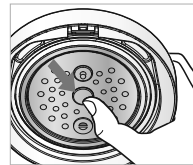

- ※ Assemble the detachable cover as shown in the photo and press the center part to complete assembly.




- ※ After assembly is complete, hold the detachable cover packing and shake it slightly to check if it is assembled properly.

HOW TO CLEAN AND MAINTAIN YOUR RICE COOKER

HOW TO CLEAN AND MAINTAIN YOUR RICE COOKER

- Clean your product periodically to maintain upkeep of the rice cooker.
(Make sure your product is unplugged when cleaning your product)
- Wipe the main body and the lid with a dry dishcloth. Do not use any commercial cleaners.
- When cleaning inner pot, do not use sharp cutlery(fork, spoon etc.) in the pot
(It may damage the inner pot coating).
- During use, rice water may stick to the detachable cover, inner pot lid, or inside the inner pot, forming a starch film. However, this does not affect hygiene.

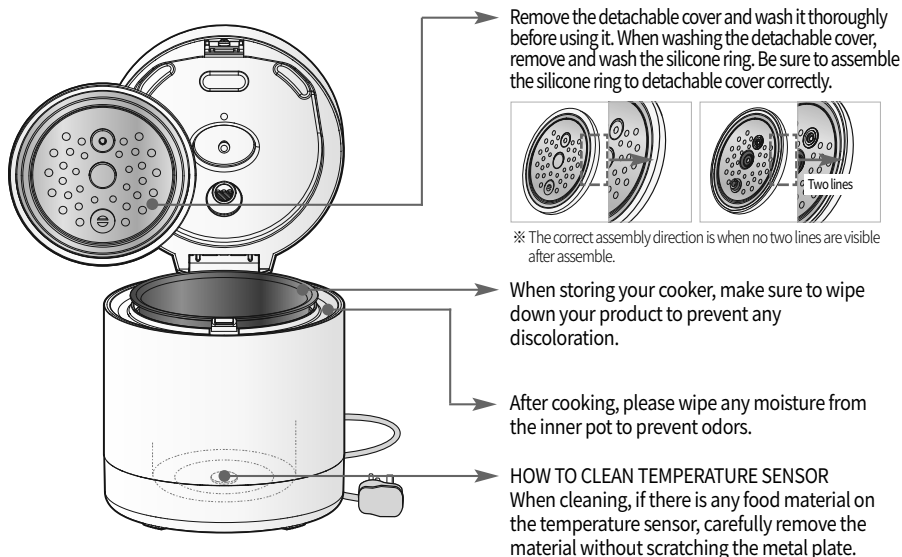

Inner pot



Wipe off all remaining food material and moisture from all areas of the outer and inner pot.


- ※ Use dish soap with a soft sponge for optimal cleaning.
- ※ Using a rough sponge, brush or abrasive material may result in damaging the inner pot.

Lid(Inner lid)



If rice water stains the inner pot's detachable cover, remove it from the main body and wipe the cover and the inside of the lid with a damp cloth. The edges of the lid are made of metal, so be careful when cleaning.
(※ Be careful not to deform the detachable cover, and always reattach it after cleaning.)

Main unit

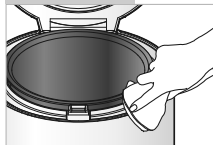

The rice water generated during cooking is designed to collect here, so after cooking, wipe it clean with a damp cloth.

Inner body




If foreign substance is stuck to the temperature sensor, carefully remove it to avoid damaging the metal plate. Clean any foreign substance or moisture from the hot plate with a soft cloth.


- ※ Using a rough sponge, brush or abrasive material may result in damaging the inner pot. Use dish soap with a soft sponge for optimal cleaning.

NAME AND FUNCTION OF EACH PART / ERROR CODE AND POSSIBLE CAUSE

Name and function of each part

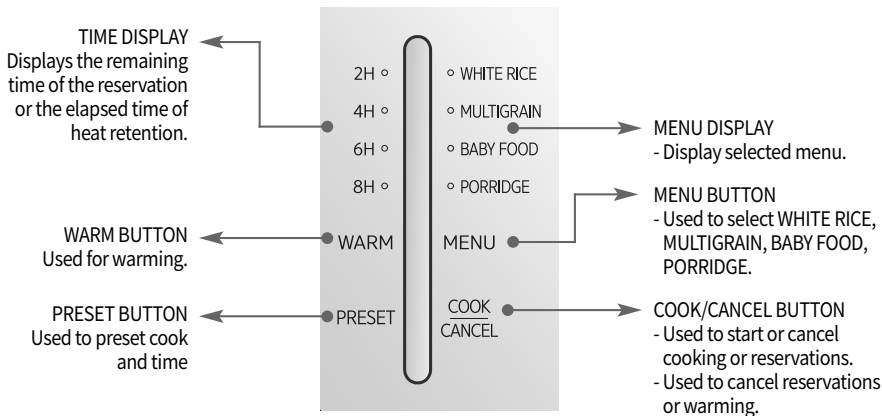

- ※ After plugging in the power cord and no operation is performed for more than one minute, display will show as figure which indicate that the appliance is in 'Standby' mode.
- ※ Press 'Cancel' button to enter 'Standby' mode.
- ※ Press the button until you hear the buzzer sound. The image of display may differ with actual display:

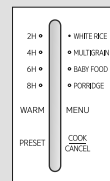


<Screen on standby>



Error Code and Possible Cause

When the product encounters any issues, you can first refer to the following.
If the errors persistently show up even in normal usage or after taking measure, inquire with customer service .


Problem on temperature sensor

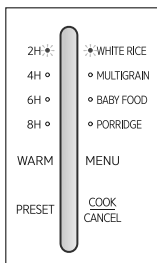

Problem on temperature sensor(Lid)
Please contact Customer Service center.

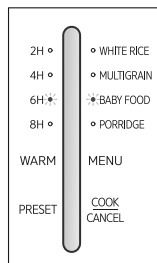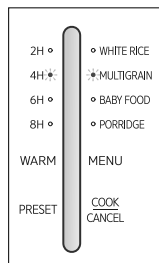

Problem on temperature sensor(Bottom)
Please contact Customer Service center.

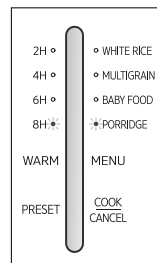

BEFORE COOKING RICE


1 Clean the inner pot and remove any moisture.

- ▶ Clean the inner pot with a dishcloth.
- ▶ Using a rough sponge may cause damage to the surface of the inner pot.



2 Measure the rice correctly with a measuring cup.

- ▶ Recommended serving: 1 full cup of rice equals to one person.
(Example : 1 persons for 1 cups, 2 persons for 2 cups)

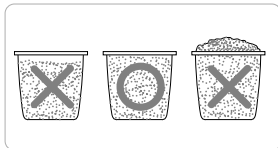


3 Clean the rice in a separate container until the water becomes clear.

4 Put rinsed rice into the inner pot.

5 Fill the inner pot with water to the respective water line depending on the type of grain being cooked.

- ▶ Place the inner pot on a flat surface and adjust the water amount up to the water level line.
(If the amount of water is large, rice water may overflow from the steam outlet during cooking or foam may form.)
- ▶ The water level line is marked on the inner pot.
- ▶ Adjustment of water height
 - WHITE RICE: Adjust water based on "WHITE RICE" water level line.
Max. 2 persons for WHITE are available.
 - MULTIGRAIN: Adjust water base on "MULTIGRAIN" water level line.
Max. 2 persons for MULTI GRAIN are available.
(If you prefer a softer texture or are cooking hard grains, soak them enough in water before cooking.)
 - PORRIDGE: Adjust water base on "PORRIDGE" water level line.
Max. 0.25 cups for porridge are available.
(Adjust the amount of water according to your taste. If you add too much water, it may boil over.)

● For 2 persons (0.36L) product

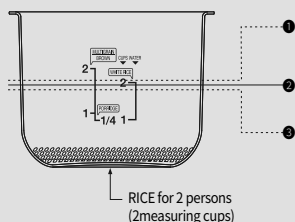

- 1 To cook sticky rice or for old rice :
Pour more water than the required water level
- 2 To cook rice for 2 people (2 measuring cups) :
Pour water up to water level 2.
- 3 When the rice is soaked sufficiently or to overcook rice:
Pour less water than the required water level
- 4 When the rice is overcooked or undercooked :
the cooking result can be varied due to the moisture content of rice (old rice) If the rice is overcooked or undercooked, please pour 1~10% more water into the pot before initiating cooking.

6 Place the inner pot into the cooker then securely close the lid.

- ▶ Completely insert the inner pot with care.
- ▶ If foreign material like rice are attached to the bottom of the inner pot, rice may not cook or the cooker may not work correctly.

How to Cook Tasty Rice


► Read the following instructions for tasty rice:

Measure rice with a measuring cup. Pour water up to the correct water level using the lines of the inner pot.	• Pour the amount of rice you want using a measuring cup (amount may vary depending on the cup) • Place the inner pot on a flat surface and pour to the correct water level line.	Your rice may be undercooked or overcooked depending on the amount of water that was added. 
Store rice correctly.	• Purchase the appropriate amount of rice and avoid direct sunlight or hot and humid places to prevent rice moisture from being dried. • For dried rice unpacked for a long time, it is better to cook with more water.	If the rice is very dry, it may be dry even if you measure it accurately. If the rice is dry, add more water.
Reduce the duration of Timer cooking.	• When using the timer, try not to use old, dry rice. If that is all that is available, add more water.	Using Timer Cooking for over 10 hours with dried rice may cause it to be undercooked, burnt, layered or cooked unevenly.
The shorter the warming time, the better!	• Keeps warm for up to 12 hours. 	If you keep it warm for more than 12 hours, the power will be cut off after 12 hours, and the rice will cool down, changing color or developing an odour.
Keep your cooker clean at all times.	• Clean the cooker frequently. In particular, wipe away foreign materials from the lid frequently.	If it is not properly and frequently cleaned, bacteria can grow, causing odors when kept warm.

HOW TO COOK

1 Press the “MENU” button to select your desired cooking mode.


- Whenever the Menu button is pressed, the cooking options will be highlighted in sequential order from WHITE RICE → MULTIGRAIN → BABY FOOD → PORRIDGE.
- Light flashes next to the selected menu and the selectable menus are lit.

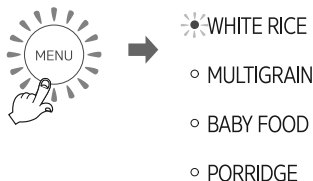

Ex) Selection of WHITE RICE

2 Press the “COOK/CANCEL” button to start cooking.


- During cooking, the LED lights up as shown below to indicate the progress of the cooking process.

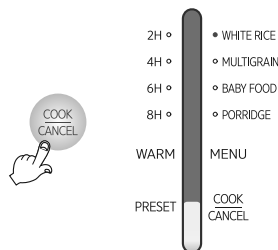

Ex) Cooking WHITE RICE

3 Cooking progress is displayed through the status bar.


- The finish time may vary depending on the menu.

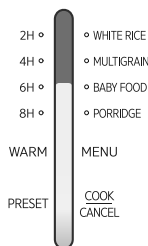

Ex) When cooking is 70% complete.

4 Cooking Complete

- When cooking is complete, a buzzer sound will sound and the keep-warm function will begin.
- After cooking is complete, immediately mix the rice thoroughly. If left unmixed, the rice will harden, discolor, and produce odor.
- Do not press the cancel button during cooking. This will cancel the cooking process.

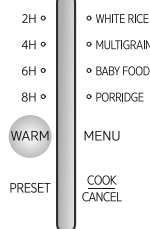

Ex) LED light turns on during keep warm

Cooking Time by Menu

Menu Category	WHITE RICE	MULTIGRAIN	PORRIDGE	BABY FOOD
COOKING QUANTITY	1~2 CUPS	1~2 CUPS	0.25 CUPS	REFER TO PAGE 15
COOKING TIME	APPROX. 30~35 MIN	APPROX. 36~43 MIN	APPROX. 45 MIN	

- ▶ After cooking BABY FOOD and similar items, odors may permeate into the unit. Ensure to use the unit after cleaning the rubber packing and lid part.
- ▶ Cooking times for different menus may vary slightly depending on ingredients.

How to use the cooking menu

WHITE RICE	Select this to cook white rice.	MULTIGRAIN	Select this to cook multi grain.
BABY FOOD	Select this to cook Baby Food.	PORRIDGE	Select this to cook porridge.

Melanoizing effect

The cooked rice can be light yellow at the bottom of the cooker, because this product is designed to improve pleasant flavour and taste.

This effect is a normal part of the cooker's function that occurs more prominently during 'Preset Cooking' compared to just 'Cooking'.

※ When mixing other rice with White, Melanoizing effect could increase.

How to cook baby food

FOOD	MENU	PREPARATIONS	PROCEDURE
SWEET PUMPKIN SOUP	BABY FOOD	Sweet pumpkin 100g, bread crumbs : 1/2T, water : 30g(1/6 cup), little bit of salt & milk	1. Peel, stone and thinly cut the well-ripened sweet pumpkin and wash them. 2. Add sweet pumpkin, 1/2T bread crumbs and 1/6 cup of water into the inner pot. 3. Close the lid & choose [BABY FOOD] menu and press [COOK] button. 4. Once the cooking is finished, add the milk and mash the ingredients with the scoop.
SWEET POTATO & APPLE PORRIDGE		Sweet potato 70g, Apple 70g, Water 45g(1/4 cup)	1. Peel the apple and sweet potato and cut them into thin slices. 2. Add the ingredients and 1/4 cup of water into the inner pot. 3. After locking the lid and selecting [BABY FOOD] on the MENU button, press the COOK button. 4. After cooking is complete, mash it with a rice paddle.

HOW TO USE PRESET FUNCTION


How to use the PRESET function

1 Press the “MENU” button to select the desired menu.

- ▶ Selectable preset menu : WHITE RICE, MULTIGRAIN, BABY FOOD, PORRIDGE.

2 Press the “PRESET” button to select the desired PRESET TIME.

- ▶ Selectable preset time : 2h, 4h, 6h, 8h, 10h, 12h.
- ▶ When set to 10h: 2h and 8h LEDs light up.
When set to 12h: 4h and 8h LEDs light up.
- ▶ Each time you press the Preset button, the following sequence is repeated.
2h → 4h → 6h → 8h → 10h → 12h → 0h (general cooking) → 2h ...
- ▶ If there is no button input within 7 seconds, the device will return to standby mode.

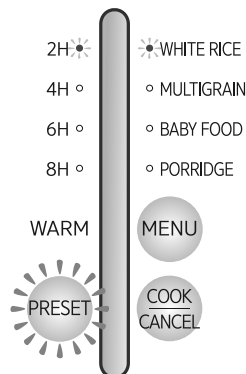

3 Press the “COOK/CANCEL” button to start preset mode.

- ▶ When entering preset cooking mode, the PRESET indicator will light up and the selected menu and set time will also light up.
- ▶ The preset timer is active when you see the preset time decrease gradually.
- ▶ Cooking will begin after the preset time.
(Completion time may vary slightly depending on the cooking amount and usage conditions.)

Precautions for the PRESET function

1 When you use the Preset function

- ▶ If the rice has been opened for a long time and is very dry, the quality of the rice may vary by layer.
- ▶ Depending on the cooking time or surrounding environmental conditions, rice may be undercooked or overcooked, so adjust the amount of water by adding or reducing from the water level indicated on the inner pot.
- ▶ If you set the reservation cooking capacity to a large amount or set the reservation cooking to a long time, the phenomenon of melanizing (fine rice sticking) may increase.
- ▶ Washed rice contains a lot of precipitated starch, so it may become sticky when cooking.
Rinse the washed rice under running water before cooking, or reduce the cooking time to reduce stickiness.


2 Changing the Preset Time

- ▶ To change the preset time, cancel the mode and restart.

TO KEEP COOKED RICE WARM AND TASTY

How to keep rice warm

- ▶ When you press the WARM button, the 'keep warm' function will be activated.
- ▶ If you press the COOK/CANCEL button during warming mode, the warming function will be cancelled and will return to standby mode.

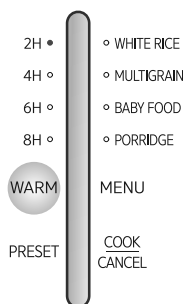

Ex) If 2 hours have passed, the 2h LED will light up.

- ▶ If a separate heating appliance or gas burner is used to cook rice, transfer the cooked rice into the cooker and press the "WARM" button to keep the rice warm. (Transferring hot rice to a cold cooker may cause the rice to become discoloured or develop an odour.)

Warming mode Precautions

It is recommended to evenly stir the cooked rice after cooking. (For a small quantity of rice, pile the rice in the centre of the Inner Pot to keep warm)

Do not keep rice scooper or wooden scooper in the Inner Pot while keeping the cooked rice warm. This may cause bacteria to grow.

Do not mix a very small amount of rice or leftovers with freshly cooked rice under the warming mode. Doing so may develop an odour. (Use a microwave oven for the cold rice.)

Keeps warm for up to 12 hours. If you keep it warm for more than 12 hours, the power to keep it warm will be cut off after 12 hours. As the rice cools, its colour may change or may develop an odour.

If possible, do not use the Keep Warm function with Multigrain (Mix) Rice, as it may produce inconsistent results. Stir and mix the rice evenly for more consistent texture.

When Odours are Detected During Warming Mode

- ▶ Please clean frequently. In particular, if the lid is not properly cleaned, bacteria can grow, causing odours.

TROUBLESHOOTING

▼ In case the appliance does not work properly, check the following list before consulting the dealer and service centre.

Case	Things to check	Possible solution
Rice is not cooked	• Did you press the COOK/CANCEL button? • Were there any problems of electricity such as a blackout?	• Press the COOK/CANCEL button after selecting the desired menu mode.
Rice is half-cooked or layered.	• Did you use the measuring cup? • Did you measure the appropriate amount of water? • Did you rinse the rice properly? • Did you presoak the rice for too long before cooking? • Was the rice too dry?	• Please refer to page 12~13. • Add the amount of water that is equal to the half amount of the one water level scale.
If rice is overcooked or too starchy.	• Did you select the correct menu? • Did you measure the appropriate amount of water? • Did you open the lid during the steaming stage?	• Select the correct menu. • Measure the appropriate amount of water. (Refer to page 12~13) • Do not open the lid until the steaming stage is over.
If water overflows during cooking.	• Did you use the measuring cup? • Did you measure the appropriate amount of water? • Did you select the correct menu?	• Please refer to page 12~13.
When it smells during warming mode.	• Is the lid closed in a correct way? • Was the Power Plug unplugged into the outlet during warming? • Was the Warm mode on over 12 hours? • Was the amount of rice too small? • Is there a rice paddle or cold rice in the Inner Pot during warming?	• Close the lid completely. • Keep the appliance plugged in during warming. • Keep the warming time less than 12 hours. (Refer to page 17) • Do not warm cold rice or other kinds of food.
When the lamp on the upper display flashes simultaneously with the buzzer sound.	• It indicates that there is a problem with the Temperature Sensor.	• Unplug the appliance and consult the dealer and service centre. (Refer to page 11)
Rice is too scorched.	• Are there any foreign substances such as rice grains on the surface of the Inner Pot or the Temperature Sensor?	• Remove any foreign substances from the outer surface of the Inner Pot and the Temperature Sensor. (Refer to the page 10)
Unpleasant smells occur after cooking or during warming mode.	• Did you clean it after cooking?	• By referring to page 9~10, wipe the lid, inner body and inner pot clean before using it. Please clean it after cooking.
A 'Ticking' sound can be heard during cooking, warming.	• Did you remove any water or moisture from the outer surface of the Inner Pot?	• The wet outer surface of the Inner Pot can cause "ticking" sound. Make sure to wipe off any water or moisture before inserting the Inner Pot.
If steam comes out of the lid	• Are there any residues adhering to the packing?	• Use the packing after wiping it with a soft cloth. • Keep the surrounding area of the packing clean.

WARRANTY PERIOD / 保修期

Thank you for purchasing CUCKOO products.

You are entitled to enjoy 1 year warranty service with the applicable terms and conditions as below :

1. Warranty period is applied for 1 year from the date of purchase upon providing proof of purchase which is authorised by CUCKOO International (MAL) Berhad, CK Electronics Sdn Bhd., CUCKOO International (S) Pte. Ltd.
2. This warranty does not cover:
 - 1) Expired warranty, missing proof of purchase, or unauthorised proof of purchase
 - 2) Damage caused by direct or indirect misuse of the product
 - 3) Damage caused by fire or natural disaster
 - 4) Damage caused by environmental factors
 - 5) Damage caused by improper repairs by unauthorised personnel
 - 6) Natural wear and tear
 - 7) Household-use products used for commercial activities
 - 8) Accessories and packaging materials are exempt from warranty service
3. Terms & conditions of warranty service may change. For more information, please visit
 - Malaysia : www.cuckoo.com.my
 - Brunei : www.cuckoobrunei.com
 - Singapore : www.cuckoo.sg

感谢您购买 CUCKOO 产品。

您有权享受 1 年保修服务，适用条款和条件如下：

1. 保修期为自购买之日起 1 年，需提供由 CUCKOO International (MAL) Berhad, CK Electronics Sdn Bhd., CUCKOO International (S) Pte. Ltd. 授权的购买证明。
2. 此保修不涵盖：
 - 1) 逾期、无法出示或出示未经授权的购买凭证
 - 2) 因直接或间接误用产品而导致的损坏
 - 3) 因火灾或自然灾害而导致的损坏
 - 4) 因环境因素而导致的损坏
 - 5) 未经授权的个人进行不当维修而导致的损坏
 - 6) 自然磨损
 - 7) 用于商业活动的家用产品
 - 8) 配件和包装材料不享有保修服务。
3. 保修服务的条款和条件可能会更改。欲了解更多信息，请浏览：
 - 马来西亚 : www.cuckoo.com.my
 - 文莱 : www.cuckoobrunei.com
 - 新加坡 : www.cuckoo.sg

CUCKOO